


Adjusting Feed Rates

All ENFit All the time!

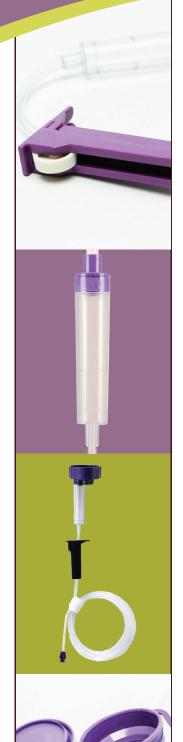

Gravity Feeding Sets with ENFit[®]

Gravity Feed Sets	ltem #	Units/Case
40mm Screw Cap Set with ENFit	VED-022	30
ENPlus Spike with ENFit	VED-028	30
500mL Bag Set (LL)* with ENFit	VED-040	30
500mL Bag Set (PVC) with ENFit	VED-042	30
1000mL Bag Set (LL) with ENFit	VED-034	30
1000mL TOP FILL Bag Set (PVC) with ENFit	VED-046	30

Setting the Feed Rate

 Vesco Medical utilizes the same drip/site chamber across all gravity items that feature 14 drops per mL. Formula: (Drops/Minute) X 4.26 = Feeding Rate (mL/Hr)

Feeding Rates			
Feeding Rate (mL/Hr)	Drops/Minute	Seconds Between Drops	
5	1	52.1	
10	3	26	
15	4	17.3	
20	5	13.9	
25	6	10.3	
30	7	8.6	
50	12	5.1	
65	15	4.0	
75	18	3.4	
100	23	2.6	
150	35	1.7	
200	47	1.3	
250	58	1.0	

Important Safety Information

- To avoid risk of a tubing misconnection, ONLY connect the distal connector to an ENTERAL feeding tube. This device is compatible with a flexible female connector on the patient's enteral feeding tube.
- Not for IV use.
- This device should be replaced at least every 24 horus.
- Do not store for prolonged periods at extreme temperatures.
- See individual product labeling for directions and important safety information.
- Single patient use.

